



The Convex Mirror Shop



INDOOR DELUXE HALF DOME MIRROR INSTALLATION GUIDE

Choose from Method 1. or Method 2.

Method 1. Using mounting holes in the back of the mirror:

1. Measure the distance between the two hole slots on the wall
 - 18" DeLuxe Half Dome holes are $12\frac{2}{3}$ " apart (320mm)
 - 24" DeLuxe Half Dome holes are $12\frac{1}{5}$ " apart (310mm)
 - 36" DeLuxe Half Dome holes are $19\frac{7}{10}$ " apart (500mm)
2. Screw the supplied Dome Capped Screws into the wall making sure they are level and protruding out from the wall approx 13mm.
3. Slot the mirror onto the screws to hang.

Measure distance apart for screws on the wall

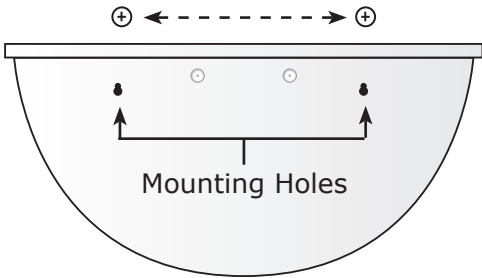

6Gx32 Screws Supplied


Method 2. Using Dome Capped Screws in the front of the mirror:

1. Undo the dome capped screws at the top corners of the mirror.
2. Using the longer 32mm screws supplied, screw the mirror directly to the wall.
3. Replace the dome cap over the screws.



Un-screw 6Gx16 dome capped screws

Screw 6Gx32 supplied screws into the wall and

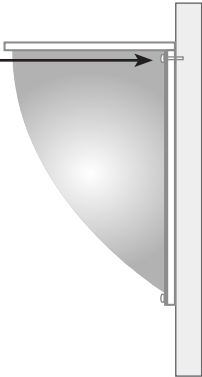

6Gx32 Screws Supplied

