


- 1. Decide the appropriate place to site the mirror to give maximum vision.
- 2. Dome capped screws are supplied for mounting directly to the corner ceiling.

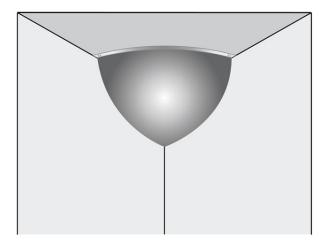

3. When installation is complete, totally remove the protective film from the