




## **PRO SERIES TRAFFIC MIRROR INSTALLATION GUIDE**

## Pole Mounting with Clamp Bracket:

- 1. Decide the appropriate place to site the mirror on 3" pole.
- 2. Fix clamp and mirror mount assembly to the pole.
- 3. Make sure adjustment slot is to the bottom.
- 4. Fix the mirror to the clamp bracket.
- 5. Once the desired position has been found, tighten the bolts and nuts.
- 6. Remove protective film from the mirror face.

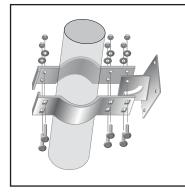

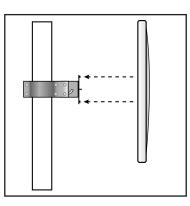

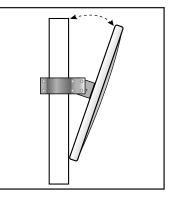





## **DELUXE TRAFFIC MIRROR INSTALLATION GUIDE**


Wall Adaptors are not included with the Pro Series Mirror Range but are available to be purchased separately.


## Wall Mounting with Optional Wall Adaptor:

- 1. Decide the appropriate place to site the mirror (on a flat surface) and mount the Wall Adaptor using suitable hardware.
- 2. Fix the clamp and mirror mount assembly to the Wall Adaptor making sure the slot is to the bottom.
- 3. Fix the mirror face to the clamp bracket.
- 4. Once the desired position has been found, tighten the bolts and nuts.
- 5. Remove the protective film from the mirror face.

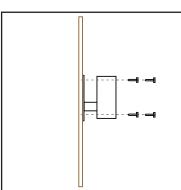

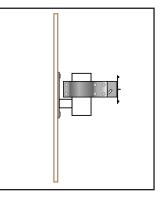

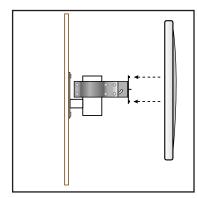

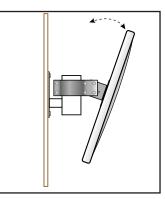

The Convex Mirror Shop 3 Bert Dr, Unit 10 West Bridgewater MA 02379 United States

Call: 781-344-8459 www.convexmirrorshop.com